

# طرح ایمنی و راه های جلوگیری از نمایش اطلاعات مودم Outdoor BM-8301 در فضای اینترنت

## توضیحات:

جهت جلوگیری از نمایش اطلاعات کاربر و مودم لازم است این اطلاعات با ترتیب خاصی بسته شوند تا خارج از دسترس همگان باشند بنابراین با مسدود کردن صفحه وب مودم و Telnet و صفحه Login می توان این کار را انجام داد.

نکته بسیار مهم : حتما Firmware Version خود را به 4.03.08-10 آپدیت کنید.

Firmware Version : 4.03.08-10



» System » WiMAX » Security » Administration » Status » Logout

## Sections

Management

Firmware Upgrading

Cli Command

PING

Log

TR069

1. Export Configuration is to save the current Mobile Station configuration to a file.
2. Firmware Update is used to upgrade the firmware of the Mobile Station to the latest version in order to add features, and improve the functionality and performance. Ensure that you have obtained the appropriate firmware for upgrading.
3. Configuration Update is used to upgrade the configuration of the Mobile Station .

Export Configuration

Export Configuration :

Firmware Update

**Upgrading firmware/configuration may take a few minutes, please don't turn off the power or press the reset button while upgrading.**

Firmware/Configuration  
Update :




April, 2013

در قسمت Security ، Firewall را Enable می کنیم و طبق مراحل زیر اقدام شود.



» System » WiMAX » Security » Policy » Administration » Status » Logout

## Sections

PKM

NAT

Firewall

A firewall is a set of rules configured to permit, deny, encrypt, decrypt, or proxy all computer traffic between different security domains based upon a set of rules and other criteria.

Enable/Disable

**Firewall :** Enable  Disable

Firewall Settings

**WAN Ping Blocking :** Enable  Disable

**WWW Port Blocking :** Enable  Disable

**Telnet Port Blocking :** Enable  Disable

Save Settings | Cancel Changes

Copyright © 2008. All rights reserved.



# در قسمت Account Admin ، Login Information Management ، Administration و Pass Admin را تغییر میدهم طبق مراحل زیر اقدام شود.

Firmware Version : 4.03.08-10



» System » WiMAX » Security » Policy » Administration » Status » Logout

## Sections

Management

Firmware Upgrading

Cli Command

PING

Log

TR069

1. The Login account setting page is used to set an **Admin Account** and **Admin Password** for the Mobile Station in order to access the web-based management. It is strongly recommended that you change account and password in order to secure the Mobile Station and your network.
2. Reset to Default used to reset the Mobile Station to its factory default settings, all current settings changed will be lost. System Reboot allows to restart the Mobile Station using its current settings. Rebooting the device will disconnect any currently active sessions.
3. Auto Roll Back allow to enable or disable the auto roll back function when new firmware updated, system will roll back to previous image if new firmware can't connect to BS.

### Login Information

Admin Account :

Admin Password :

Re-enter to Confirm :

### Reset/Reboot

Reset to Default :



زمانی که به هر دلیلی Reset to Default شود تنظیمات به حالت اولیه برمی گردد لذا مراحل قبلی باید انجام شود

Firmware Version : 4.03.08-10



» System » WiMAX » Security » Policy » Administration » Status » Logout

## Sections

PKM

NAT

Firewall

A firewall is a set of rules configured to permit, deny, encrypt, decrypt, or proxy all computer traffic between different security domains based upon a set of rules and other criteria.

Firewall :

Enable

Disable

Save Settings | Cancel Changes

